

- Use split-eyelet connectors to provide a quick and easy way to connect spray nozzles to piping systems
- Simply drill a hole in side of pipe
- Place inlet of split eyelet into the hole; seal eliminates leaking
  - Assemble the clamp component to secure the assembly to the pipe
- Adjustable ball fitting enables precise control of spray direction.  
Assemble nozzle into the ball and adjust the orientation of the nozzle.  
Large internal passages minimize clogging



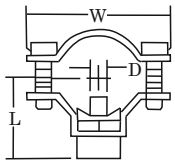
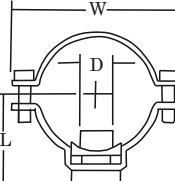
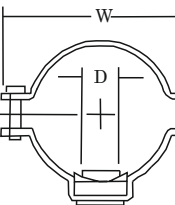
7521



8370



15475

| Split Eyelet  | Accessory Type | Pipe Size (in.) | W (in) | D(Dia.) (in) | L (in.) | Net Weight (oz) |
|---|----------------|-----------------|--------|--------------|---------|-----------------|
|  | 7521           | 1/2             | 0.938  | 0.281        | 1.108   | 3.1             |
|   |                | 3/4             | 0.938  | 0.281        | 1.213   | 3               |
|   |                | 1               | 0.938  | 0.281        | 1.346   | 2.3             |
|  | 8370           | 1-1/4           | 1.063  | 0.688        | 1.611   | 6.3             |
|   |                | 1-1/2           | 1.063  | 0.688        | 1.731   | 7               |
|   |                | 2               | 1.063  | 0.688        | 1.970   | 7.4             |
|  | 15475          | 2-1/2           | 1.125  | 1.250        | 2.469   | 9.8             |
|   |                | 3               | 1.125  | 1.250        | 2.781   | 28.9            |
|   |                | 4               | 1.125  | 1.250        | 3.281   | 34.2            |

Based on the largest/heaviest version of each type